

## NKCR.E68961 - Auxiliary Devices

Note: We are enhancing our systems and you may notice duplicate entries/missing/outdated data. During this interim period, please contact our Customer Service at <https://www.ul.com/about/locations>.

## Auxiliary Devices

## IDEC CORP

E68961

6-64 NISHIMIYAHARA 2-CHOME  
YODOGAWA-KU, OSAKA 532-0004 Japan

Trademark and/or Tradename:              
**IDEC**

Note: For additional marking information, refer to the [Guide Information Page](#).

**AS-Interface fail-safe monitor**, Model(s): [SX5A-MBR01](#), [SX5A-MBR02](#), [SX5A-MBR03](#), [SX5A-MBR04](#)

**AS-interfaces**, Model(s): [FL1B-CAS2](#)

**Auxiliary Device Open type Contact Blocks**, Model(s): [HW-U](#) followed by 01 or 10, may be followed by R, may be followed by MAU, may be followed by additional suffixes.

**Auxiliary Device Open type Direct Adapter for illuminated models**, Model(s): [HW-GA1N](#)

**Auxiliary Device Open type Dummy contact block**, Model(s): [HW-DB](#)

**Auxiliary Devices**, Model(s): [HW-DP](#), [HW-PAQ2](#), [HW-PAQ3](#), [HW-PAQ4](#)

**Auxiliary Devices Open Type**, Model(s): [HR6S-AB1C](#), [HR6S-AB1P](#), [HR6S-AF1C](#), [HR6S-AF1P](#), [HR6S-AK1C](#), [HR6S-AK1P](#), [HR6S-AT1C](#), [HR6S-AT1P](#), [HR6S-DN1C](#), [HR6S-DN1P](#), [HR6S-EP1C](#), [HR6S-EP1P](#), [HR6S-S1C](#), [HR6S-S1P](#)

**Auxiliary Devices, "Series E"**, Model(s): [EB3P](#), [EBBN](#), [EBN](#), [EC9D](#), [EON](#), [ESN](#), [ETN](#), [EWQN](#)

**Auxiliary devices, Complete Assembly**, Model(s): [Complete Assembly HS5L-](#) followed by A, B, C, D, F, G, H, J, DD, VA, VB, VC, VD, VF, VG, VH, VJ, VW, VX, TA, TB, TC, TD, TF, TG, TH, TJ, XA, XB, XC, XD, XF, XG, XH or XJ, followed by 4 or 7Y, maybe followed by 0 or 4, maybe followed by L, maybe followed by 01 to 99, followed by M, SM, SG, SP, SR or SL, maybe followed by any letter, maybe followed by 1, 2 or 3, maybe followed by additional suffixes.

**Auxiliary devices, Complete Assembly**, Model(s): [Switches without Cover, HS5L-](#) followed by A, B, C, D, F, G, H, J, DD, VA, VB, VC, VD, VF, VG, VH, VJ, VW, VX, TA, TB, TC, TD, TF, TG, TH, TJ, XA, XB, XC, XD, XF, XG, XH or XJ, followed by 4 or 7Y, maybe followed by 0 or 4, maybe followed by L, maybe followed by 01 to 99, maybe followed by any letter, maybe followed by 1, 2 or 3, maybe followed by additional suffixes.

**Auxiliary Device: Open type Pilot Lights**, Model(s): [AP22M](#) followed by 2 or 2T, followed by Q, followed by 3, 4, H, H2, M, M3 or M4, may be followed by any letters and/or numbers

**Cam switches**, Model(s): [ACS NK+](#), [ACS NO+](#), [UCSQM+](#), [UCSQO+](#)

**Contact blocks, open type**, Model(s): [HW-S01+](#), [HW-S01R+](#), [HW-S10+](#), [HW-S10R+](#)

**Control box enclosures, indoor use only, use with type 4X rated auxiliary devices**, Model(s): [FB Series](#)

**Mono-lever operators, for use with contact block BR**, Model(s): ARN may be followed by S or L, followed by 1, 2, 3 or 4, may be followed by numbers and/or letters.

**Mono-Lever Switch**, Model(s): HW-CN may be followed by P, followed by 10, 01, 11, 20, 21, 22, 02, 30, 12, 03, 40, 31, 13, 04, 50, 41, 32, 23, 14, 05, 60, 51, 42, 33, 24, 15, 06, 1S, 2S, 5S, 6S, 7S, 8S, 9S or other alphanumeric characters, may be followed by \*\*\*\*\*. The above contact unit nomenclature may also be suffixed by Q2, Q3 or Q4, etc. after the designation of the contact arrangement for illuminated device HW-PAQ2, HW-PAQ3, HW-PAQ4, etc. incorporated.

**Mono-Lever Switch, "Mono-Lever Switch"**, Model(s): HW followed by 1 or 4, followed by M, followed by any suffixes.

**Mono-Lever Switch, "Operator Unit for Push-Pull Switch"**, Model(s): HW followed by 1 or 4, followed by B, followed by Y, followed by 2, followed by R or Y, followed by any suffixes.

**Mono-Lever Switch, "Pushlock Turn Reset or Pushlock Key Reset"**, Model(s): HW followed by 1 or 4, followed by B, followed by V or X, followed by 3, 4 or 5, may be followed by F or C or P, followed by 01, 11, 02, 21, 12, 03, 31, 22, 13 or 04, may be followed by two alphanumerics, followed by R, R-EMO, R-EMO-2, or Y, may be followed by MAU, followed by any suffixes.

**Mono-Lever Switch, "Push-Pull Switch"**, Model(s): HW followed by 1 or 4, followed by B, followed by Y, followed by 2, may be followed by F or C or P, followed by 01, 11 or 02, may be followed by two alphanumerics, followed by R or Y, may be followed by MAU, followed by any suffixes.

**N /TWN Series (panel cutout dimensions-30mm diam) illuminated push button switches**, Model(s): AOLNE

**N/TWN Series (panel cutout dimensions-30mm diam) illuminated push button switches**, Model(s): ABLN, ALLN, ALN, ALNE, AOLN, ULQN, UOLQN

**N/TWN Series (panel cutout dimensions-30mm diam) pilot lights**, Model(s): APNG, APNGE, UPQN, UPQNE

**N/TWN Series (panel cutout dimensions-30mm diam) push button switches**, Model(s): AB, AO, AT, UB, UO, UT, UW or ABB may be followed by Q, followed by N.

**N/TWN Series (panel cutout dimensions-30mm diam) selector push button switches**, Model(s): ABN may be followed by 6, 7 or 9, may be followed by L.

**N/TWN Series (panel cutout dimensions-30mm diam) selector switches**, Model(s): ASN, ASTN

**Pilot light units**, Model(s): HW may be followed by 1 or 2, may be followed by P, may be followed by 1 or 2, followed by J, may be followed by P, followed by Q, RH or CM, may be followed by 0, 2, 3 or 4, H2, M2 or M4, may be followed by one to three letters, may be followed by additional letter(s) and/or number(s), including hyphens

**Pilot Light with or without Transformer**, Model(s): Type HW?P, HW1P-5Q4, HW1P-5Q7.

**Pilot lights (panel cutout dimensions-30mm diam), "N/TWN Series"**, Model(s): APN, APNE

**Proximity switches**, Model(s): HS7A-DMC59010, HS7A-DMC5902, HS7A-DMC5905, HS7A-DMC59110, HS7A-DMC5912, HS7A-DMC5915, HS7A-DMC79010, HS7A-DMC7902, HS7A-DMC7905, HS7A-DMC79110, HS7A-DMC7912, HS7A-DMC7915, HS7A-DMP50010, HS7A-DMP5002, HS7A-DMP5005, HS7A-DMP50110, HS7A-DMP5012, HS7A-DMP5015, HS7A-DMP70010, HS7A-DMP7002, HS7A-DMP7005, HS7A-DMP70100, HS7A-DMP7012, HS7A-DMP7015, HS7A-DMR59010, HS7A-DMR5902, HS7A-DMR5905, HS7A-DMR59110, HS7A-DMR5912, HS7A-DMR5915, HS7A-DMR79010, HS7A-DMR7902, HS7A-DMR7905, HS7A-DMR79110, HS7A-DMR7912, HS7A-DMR7915

**Push buttons**, Model(s): Contact Unit Model XW-C may be followed by T, followed by 0, 1, or 2 or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3 or Q4, followed by M or MF, may be followed by R, may be followed by optional letters and/or numbers that may employ hyphens

**Push buttons, "XN Series"**, Model(s): Model XN followed by 1, 4, or 5, followed by E, followed by B, L, or T, followed by V, L, or D, followed by 4, or 5, followed by 0, 1, 2, or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3, or Q4, followed by M, or MF, followed by R, R-EMO, RH, RH-EMO, N, Y, B, G, W, or S, may be followed by optional letters and/or numbers that may employ hyphens

**Push buttons, "XN Series"**, Model(s): XN Series Model XN, followed by 1, 4, or 5, followed by E, followed by B, L, or T, followed by V, L, or D, followed by 4, or 5, followed by 0, 1, 2, or 3, followed by 1, 2, 3, or 4, may be followed by Q1, Q2, Q3, or Q4, followed by M, or MF, followed by R, R-EMO, RH, RH-EMO, N, Y, B, G, W, or S, may be followed by optional letters and/or numbers