

Installations of IDEC Intrinsically Safe System

EB3S-N_Sensor Barrier.(TypeB)



Certificate number : PTB09ATEX2046
 Intrinsically Safe System
 II(1)G [Exia]IIB/IIC, II(1)D [Exia]IIIB/IIC

When installing an IDEC Intrinsically Safe System, make sure it conforms to the following drawings and descriptions as well as all applicable requirements.
 European: CENELEC Standard EN 60079-0, EN 60079-11, EN 60079-25 , EN 60079-26

All intrinsically safe systems must have "EB3S-N in the part number. The Sensor Barrier must be located in a safe area (non-hazardous area). They are connected to the 3 wires photoelectric switches and other, which is installed in hazardous area, and are considered as "simple equipment" or have already been certified / approved.

Warning

Substitution of components or unauthorized repair may impair intrinsic safety of apparatus.

1 Certified Sensor Barrier

Type **EB3S-BabcN**

"EB3S-B"= Series type

a = Output **R** : Relay, **T** : Transistor,

b = Number of channels **01, 02, 03, 04 05, 06**

c = Power supply **A** : 100-240V ac, **D** : 24V dc

Rating and Parameters of Sensor Barrier

Ta=60°C Um= 250V

Uo = 13.2V Io = 56mA Po = 185mW

Lo(mH)	1.0	0.5	0.4	0.35	0.3	0.25	0.2	0.1
Co(μF) /IIB/IIBB	3.5	4.3	4.6	4.8	5.0	5.3	5.6	5.8
Co(μF) /IIC/IICB	0.61	0.75	0.79	0.82	0.85	0.89	0.94	0.94

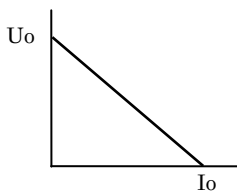


Fig.1 Voltage-Current

2 Mounting

All bolts, nuts, screws, and other means of fastening, including the unused wiring screws, shall be fastened in place, properly tightened and secured. Mount the Sensor Barrier on a 35mm track or directly mount on a panel surface using screws.

3 Servicing – Replacement and Repairs

Inspection and replacement of the Sensor Barriers shall not be made until power is disconnected and shall not be connected again until all replacement Sensor Barriers are properly re-assembled. All electrical components, including the interconnecting wiring, shall be kept in safe condition. Defective Sensor Barriers should be returned to the factory for repair.

4 Typical Installation

Install the Sensor Barrier must be according to the following Ratings and Parameters of intrinsically safe and descriptions.

To avoid electrical shock, install the Sensor Barrier in a tool-accessible enclosure.

Layout and wiring must be done to prevent the inductive or capacitive induction to the intrinsically safe circuit.

For example, separate intrinsically safe circuits from non-intrinsically safe circuits, by a minimum space of 50mm or using a full height metal separator. If color-coding is required use for the intrinsic safe components and terminals, use only cables and terminals with light blue markings.

5 Note

- The Sensor Barrier must be located in a safe area (non-hazardous area). Intrinsically safe equipment must be located in a hazardous area.
- Install the Sensor Barrier in compliance with the enclosure, mounting, spacing, and segregation requirements of the ultimate application.
- In the external wiring of intrinsically safe circuit, the intrinsically safe circuit shall be separated mutually and shall not be effected from another. (---) shows an independent circuit.
- Make sure that the control equipment connected to the Sensor Barrier does not use or generate more than 250Vrms or Vde(Um=250V).
- Use the Sensor Barrier at ambient temperature -20~+60°C.

IDEC CORPORATION

Manufacturer: IDEC CORP.

2-6-64, Nishimiyahara, Yodogawa-ku, Osaka532-0004, Japan

EU Authorized Representative : IDEC ELEKTROTECHNIK GmbH

Heseltuecken 8, 22453 Hamburg Germany

DECLARATION OF CONFORMITY

We, IDEC CORPORATION 2-6-64, Nishimiyahara, Yodogawa-ku, Osaka532-0004, Japan

declare under our sole responsibility that the product:

Description : Sensor Barrier

Model No : EB3S-N

to which this declaration relates is in conformity with the EC Directive on the following standard(s)

or other normative document(s). In case of alteration of the product, not agreed upon by us,

this declaration will lose its validity.

Applicable EC Directive : ATEX Directive (2014/34/EU)

EMC Directive (2014/30/EU)

Applicable Standard(s) : EN60079-0, EN60079-11 (ATEX)

EN60079-6-2, EN61000-6-4 (EMC)

201608

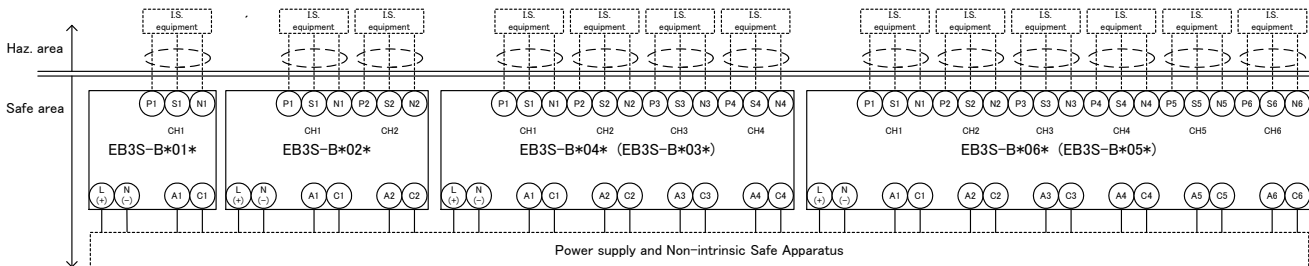


Fig.2 System configuration